

line 8, change "equalization vessel" to
--control tank--,

line 24, change "equalization vessel" to
--control tank--,

line 27, change "equalization vessel" to
--control tank--.

Page 3, lines 13-14, change "equalization vessel" to
--control tank--.

Page 4, line 16, change "equalization vessel" to
--control tank--,

line 23, change "equalization vessel" to
--control tank--.

Page 5, line 14-15, change "equalization vessel" to
--control tank--.

Page 6, line 22, change "equalization vessel" to
--control tank--,

line 22, after "volume", change "equalization" to
--control--,

line 23, change "vessel" to --tank--,

line 27, change "equalization" to --control--.

Page 7, line 1, change "vessel" to --tank--.

Page 8, line 9, change "equalization vessel" to
--control tank--,

line 10, change "equalization vessel" to
--control tank--,

lines 12-13, change "equalization vessel" to
--control tank--,

line 17, change "regulating" to --control--,

line 22, change "regulating" to --control--.

Page 9, lines 4-5, change "equalization vessel" to
--control tank--,

line 9, change "equalization vessel" to
--control tank--,

line 14, change "equalization vessel" to
--control tank--.